

INSTANT HOT WATER FAUCET ^Δ & HEATING TANK


Cat. No.
I7232
I7236



INSTALLATION INSTRUCTIONS



I7236

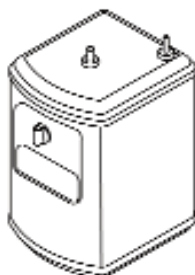

I7232

- * DISPENSER WILL DRIP DURING INITIAL HEAT UP AND DURING USE WHEN TANK IS HEATING MORE WATER. THIS IS NORMAL
- * MAKE SURE THE TANK OUTLET SANTOPRENE TUBE HAS NO LOOPS OR LOW AREAS
- * NEVER DISPENSE BOTH HOT AND COLD WATER AT THE SAME TIME
- * NEVER SET HEATING TANK TEMPERATURE DIAL TO MAX OR WATER MAY BOIL OUT

INITIAL INSTALLATION FOR BOTH STYLES

1. MAKE SURE COUNTER HAS A 1 1/4" TO 1 3/8" MINIMUM HOLE AND MAXIMUM 2 1/4" THICK.
2. MAKE SURE GASKET K4800-9003 IS IN THE BOTTOM OF FAUCET BODY. SLIDE THE MOUNTING HOSES THROUGH THE COUNTER.
3. PLACE THE LARGE C WASHER ON THE MOUNTING NIPPLE AND THREAD ON LOCK NUT. MAKE SURE THE FAUCET IS ALIGNED PROPERLY. TIGHTEN THE LOCK NUT.
4. INSTALL TANK DO NOT PLUG IN. CONNECT 550-9100-15-LF TUBE ADAPTER TO TANK. DO NOT OVERTIGHTEN.
5. REFER INSTRUCTIONS BELOW FOR THE TYPE OF FAUCET BEING CONNECTED.

INSTALLING I7232 HW ONLY SEE FIG. 1, 2 & 3.

1. CONNECT WC2001 3/8 COMPRESSION HOSE TO INLET SUPPLY VALVE OR FILTER.
2. CONNECT WCD2002 1/4 COMPRESSION HOSE DIRECTLY TO THE 1/4 INLET TUBE ON THE CORNER OF THE TANK.
3. MEASURE AND CONNECT 550-8002 SANTOPRENE TUBE TO 3/8" TANK ADAPTER IN CENTER OF TANK AND BARB ON TANK MOUNTING NIPPLE. INSTALL 5700149 HOSE CLAMPS.
4. TURN ON WATER SUPPLY, OPEN FAUCET AND FILL TANK. DO NOT TURN ON HEATER. CHECK FOR LEAKS.

INSTALLING I7236 HW & CW SEE FIG. 1, 4, 5, 6 & 7.

1. SELECT CORRECT FIG. WITH ADDITIONAL APPLIANCES TO BE INSTALLED.
2. WHEN CONNECTING TO A WATER FILTER CONNECT THE TWO WC-D2001 3/8 COMPRESSION HOSES TO A COMPRESSION TEE THEN CONNECT TO A WATER SUPPLY.
3. WHEN CONNECTING TO A WATER CHILLER CONNECT WCD2002 3/8 COMPRESSION HOSE MARKED "TO WATER CHILLER OUTLET". CONNECT THE OTHER 3/8 COMPRESSION HOSE TO A WATER INLET
4. MEASURE AND CONNECT 550-8002 SANTOPRENE TUBE TO 3/8" TANK ADAPTER BARB IN CENTER OF TANK AND ON TANK MOUNTING NIPPLE. INSTALL 5700144 CLAMPS.
5. TURN ON WATER SUPPLY, OPEN FAUCET AND FILL TANK USING HW HANDLE. DO NOT TURN ON HEATER. CHECK FOR LEAKS.

TURN ON HEATING TANK

1. PLUG IN TANK AND TURN TEMPERATURE DIAL TO 4 OCLOCK POSITION. ALLOW 20 MINUTES TO REACH SET TEMPERATURE. TURN DIAL TO DESIRED TEMPERATURE AND CHECK AGAIN FOR LEAKS.

FINISH CARE & MAINTENANCE

NEVER USE ANY HARSH ALKALI, ACID BASED DETERGENTS OR CLEANERS SUCH AS SOFT SCRUB[®], SCRUBBING BUBBLES[®] OR COMET[®] TO CLEAN. DO NOT USE BRILLO[®] OR SCOTCH BRITE[®] PADS. THESE WILL ALL HARM THE FINISH. TO CLEAN, USE ONLY A DAMP SOFT CLOTH AND WIPE USING A SOFT CLOTH. STANDARD WINDEX[®] CAN ALSO BE USED SPARINGLY. IT IS NOT NECESSARY TO WIPE HAND TO REMOVE SPOTS. TO MAINTAIN THE FINISH, WIPE WITH A SOFT DRY CLOTH AFTER USE. AN OCCASIONAL COAT OF PURE CARNUBA WAX WITHOUT CLEANERS WILL HELP PROTECT THE FINISH.


WARRANTY

CONTACT BARCLAY FOR WARRANTY INFORMATION. CLAIMS REQUIRE PROOF OF PURCHASE.

^Δ LESS THAN 0.25% LEAD

INSTANT HOT WATER FAUCET & HEATING TANK PARTS LIST

Cat. No.
I7232
I7236

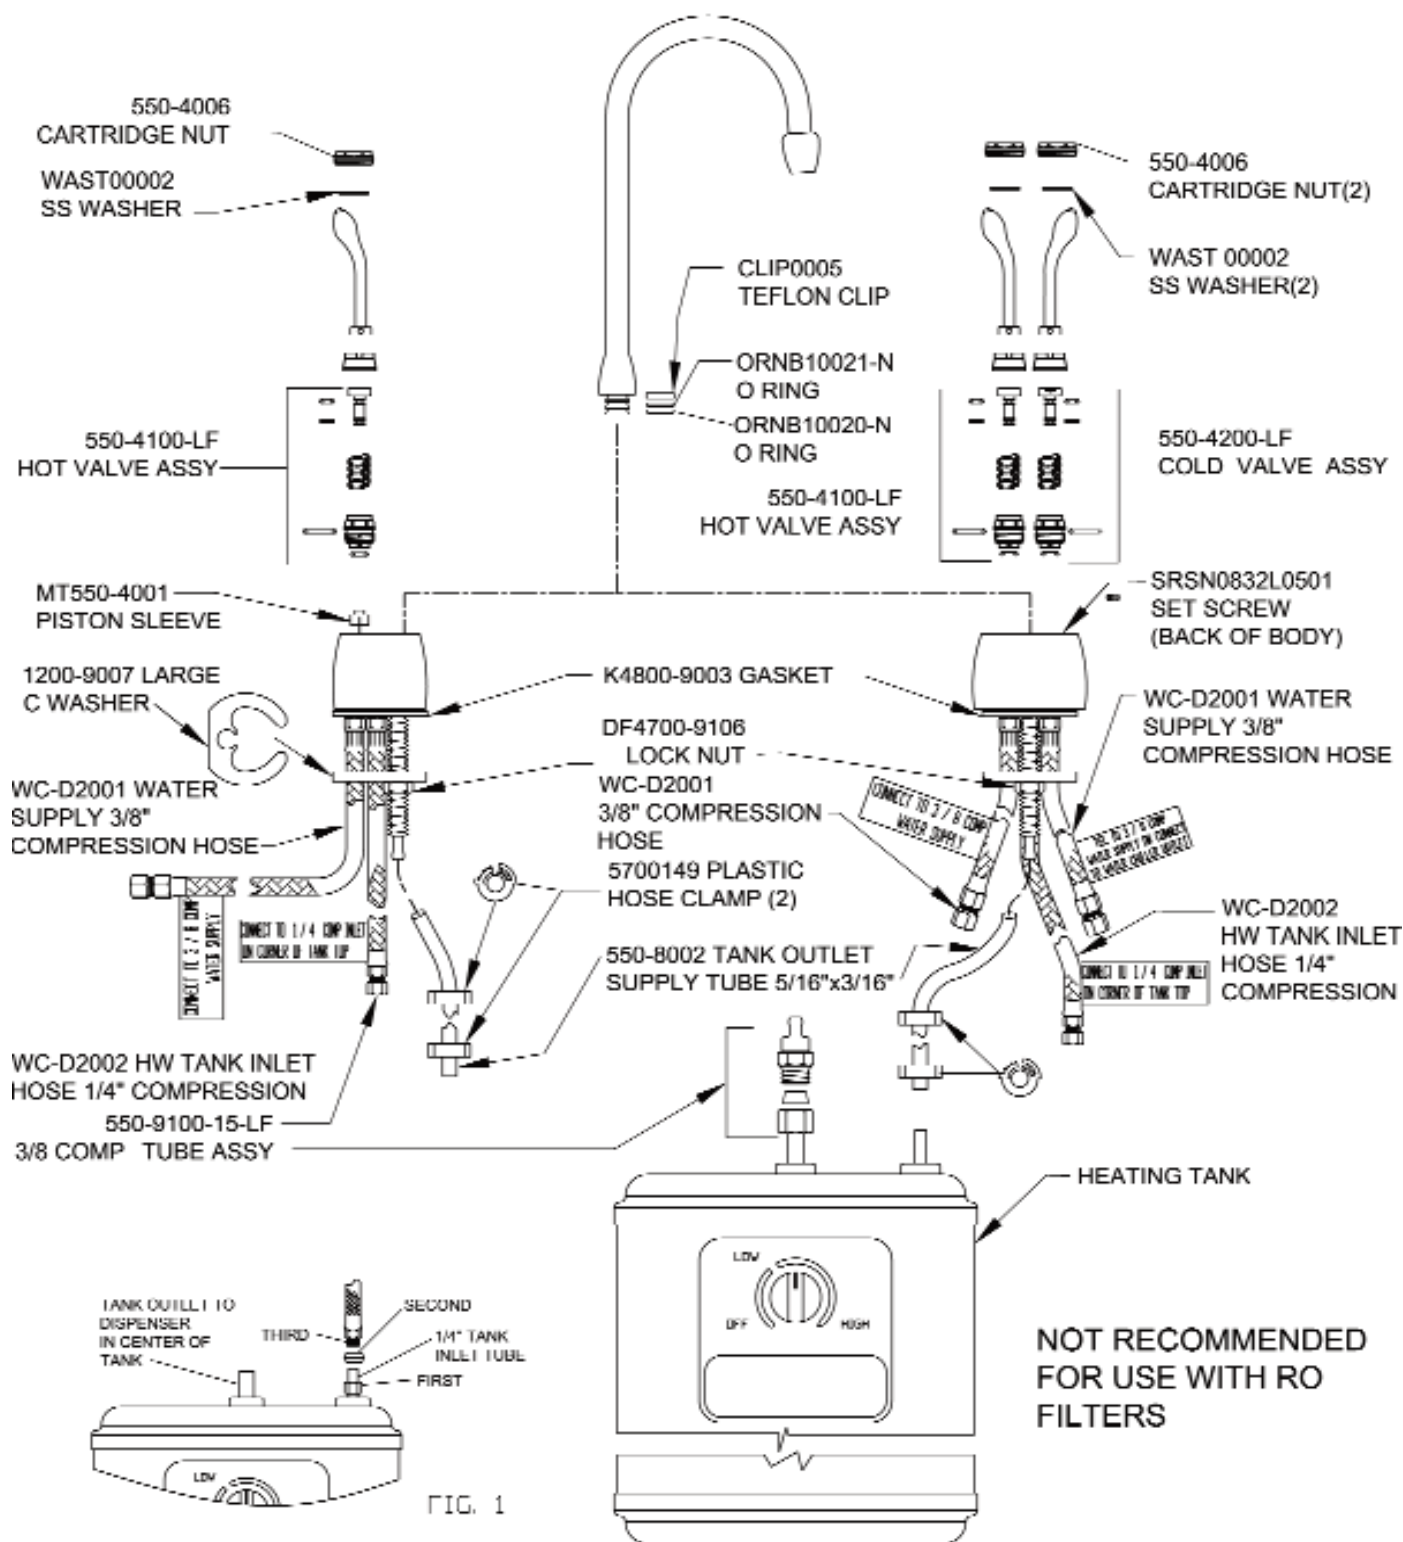

CAT. NO
I7232

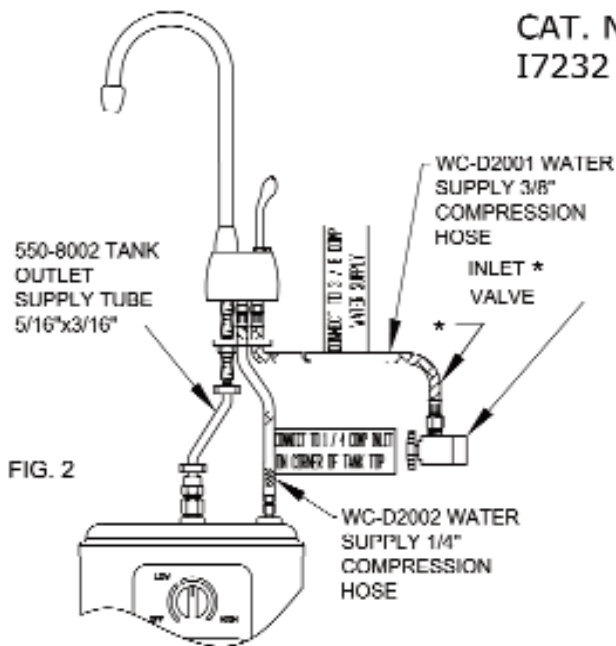


FIG. 2

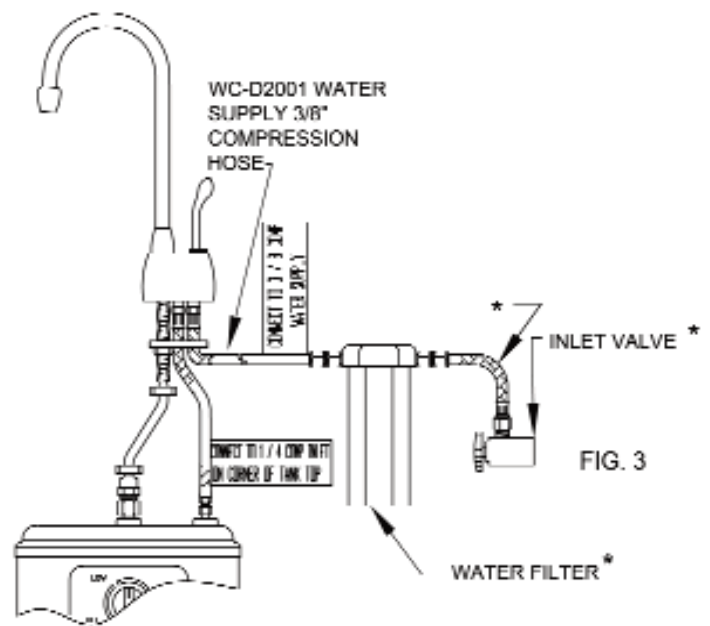


FIG. 3

CAT. NO
I7236

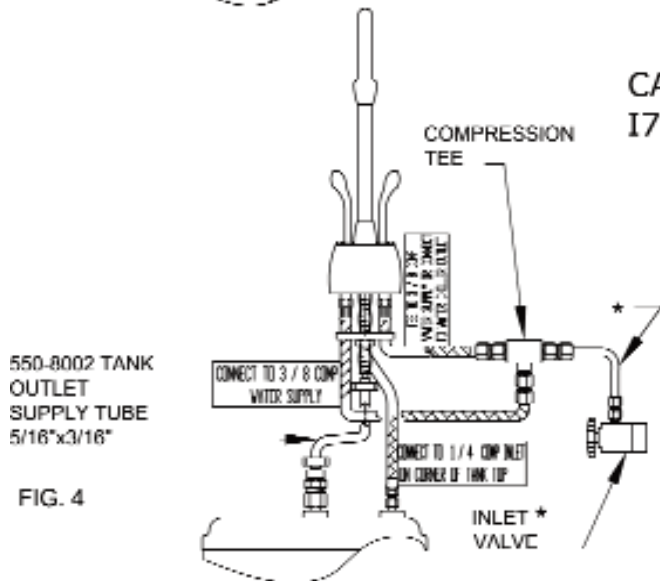


FIG. 4

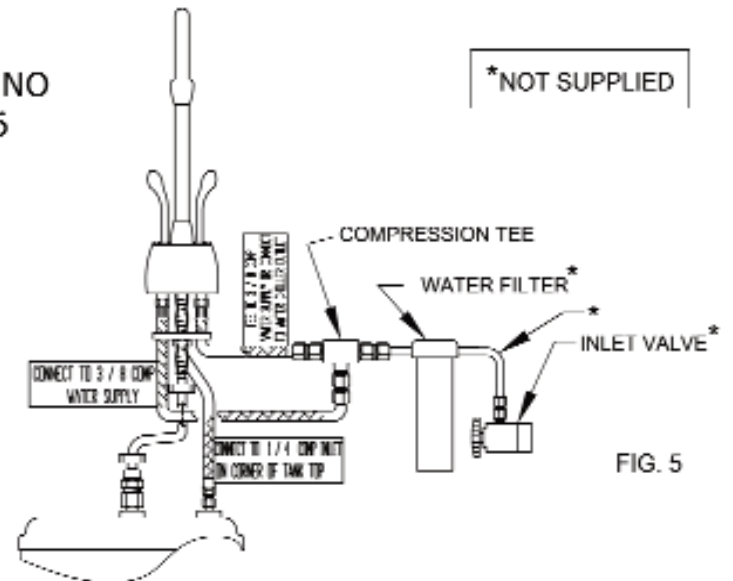


FIG. 5

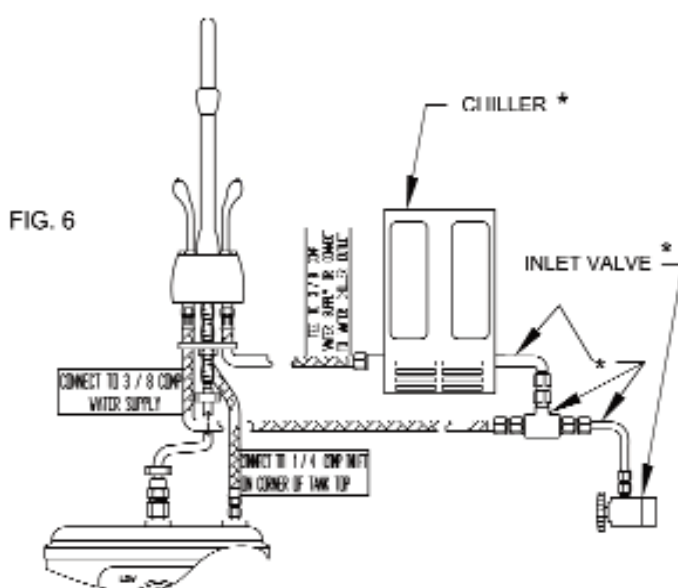


FIG. 6

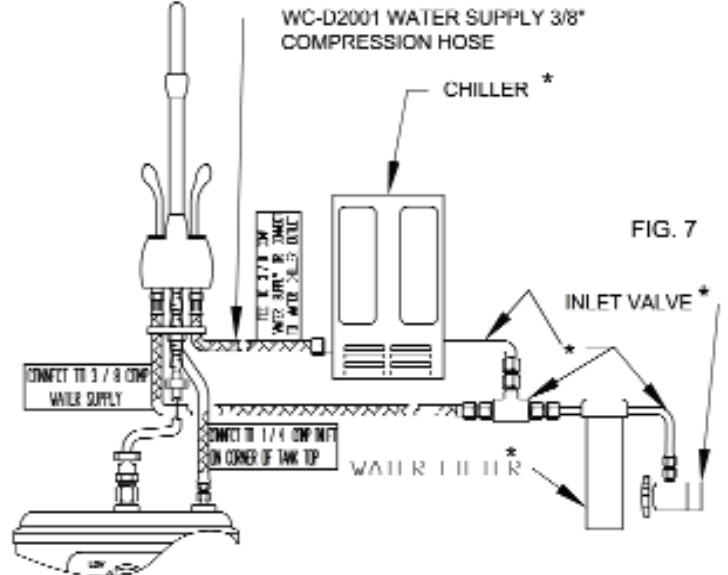


FIG. 7

*NOT SUPPLIED